

INDICATOR POST WALL TYPE

Fig No.: WPO365



MATERIALS LIST

Name	Material
Hoisting Ring	ASTM A105
Hex Nut	ASTM A105
Handwheel	ASTM A536
Gasket	ASTM SS304
Operating Nut	ASTM A536
Dust Cap	EPDM
Rethiner Ring	65Mn
Pin	Steel / SS304
Operating Screw	ASTM SS304
Body	ASTM A536
Window Cover	ASTM A307B
Window	Lexan
Hex Bolt	Steel / SS304
Plat Washer	Steel / SS304
Seal Ring	EPDM
Open Indicator	ASTM 2024
Shut Indicator	ASTM 2024
Flange	ASTM A536
Square Tube	AISI 1045
Handle	Parts
Screw	Steel / SS304
Plug	ASTM SS304
Cotter	Steel / SS304
Plat Washer	Steel / SS304
Screw	Steel / SS304
Hex Nut	Steel / SS304

Note : Internal and external fusion bonded epoxy / polyester coating to RAL3002 (specify on order).

FIELD ADJUSTMENT

1. Remove the top section from the top of the Indicator Post assembly.
2. Set the "OPEN" and "SHUT" targets for the appropriate valve size.
3. Reattach the Top Section to the top of the Indicator Post assembly.

